

## Product Name: COACH LANTERN ES PIR

### General information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by TamLite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.



Luminaires marked with this symbol must not be covered with thermally insulating material.

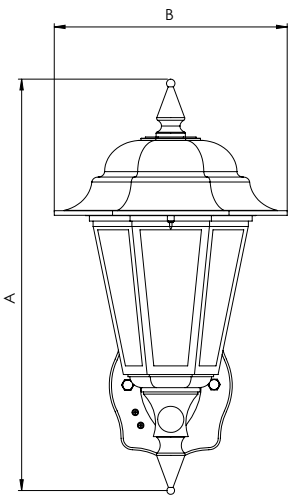
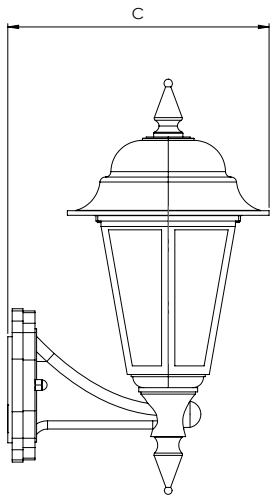


This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.

### Dimensions

|             | A (mm) | B (mm) | C (mm) |
|-------------|--------|--------|--------|
| <b>XCLA</b> | 368    | 214    | 240    |

\*PIR Override - The PIR sensor can be overridden to keep the coach lantern on permanently.


\*Switch the fitting/circuit OFF – ON – OFF – ON and the lamp will flash 4 times and enter over-ride mode and remain ON.

\*To revert back to PIR mode, repeat the above step – the lamp will flash 4 times and PIR mode will be activated.


### Page 1 of 2

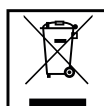TamLite Technical  
Stafford Park 12,  
Telford, Shropshire,  
TF3 3BJ

+44(0)1952 292441  
technical@tamlite.co.uk  
Document No: V2



220-240V  
50/60Hz








 


IP44

IK06

ta  
0°C to 25°C


## Product Name: COACH LANTERN ES PIR
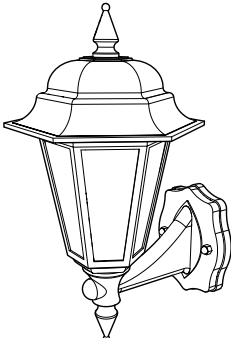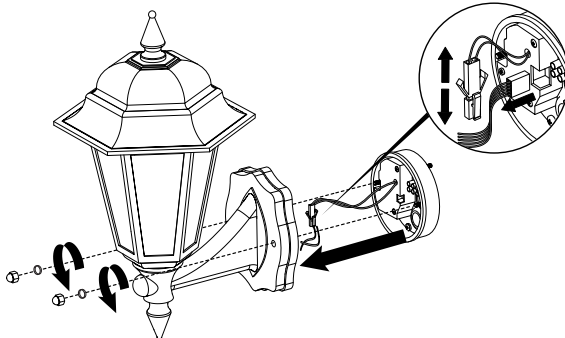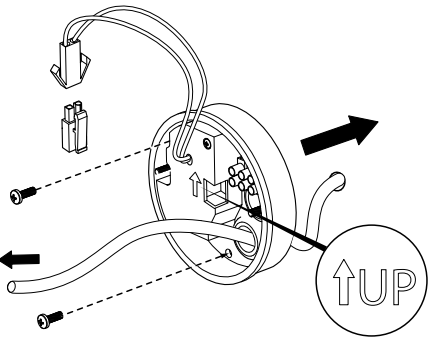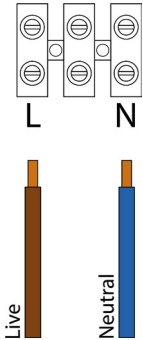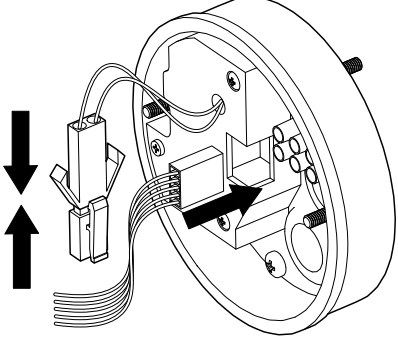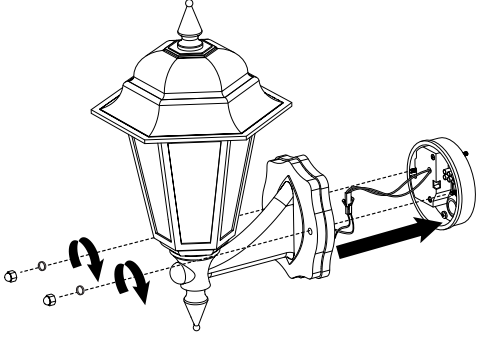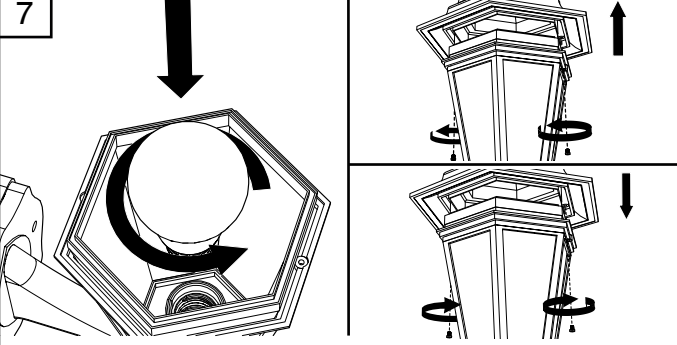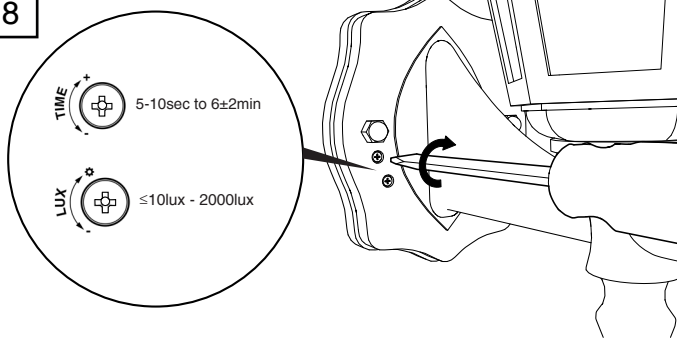
|   |  |
|---|--|
| <p><b>1</b></p>  <p>Remove product from its packaging.</p>   | <p><b>2</b></p>  <p>Remove the nuts to release the mounting plate and unclip the cable connectors.</p> |
| <p><b>3</b></p>  <p>Bring supply cable through mounting plate and secure with appropriate hardware.</p> | <p><b>4</b></p>  <p>Terminate supply cable as shown.</p>   |
| <p><b>5</b></p>  <p>Clip the cable connectors back together.</p>                                       | <p><b>6</b></p>  <p>Re-assemble the luminaire and secure to the mounting bracket.</p>                |
| <p><b>7</b></p>  <p>Remove the top piece, secure the ES lamp and then re-attach the top piece.</p>      | <p><b>8</b></p>  <p>Adjust PIR settings the desired level.</p>                                       |


## Page 2 of 2

 Tamlite Technical  
Stafford Park 12,  
Telford, Shropshire,  
TF3 3BJ

+44(0)1952 292441  
technical@tamlite.co.uk  
Document No: V2



220-240V  
50/60Hz

 

IP44

IK06

ta  
0°C to 25°C